


BE3920 Operating Instructions

(Translation of original)

BRINKMANN Immersion Pumps

TH/STH2...TH/STH6

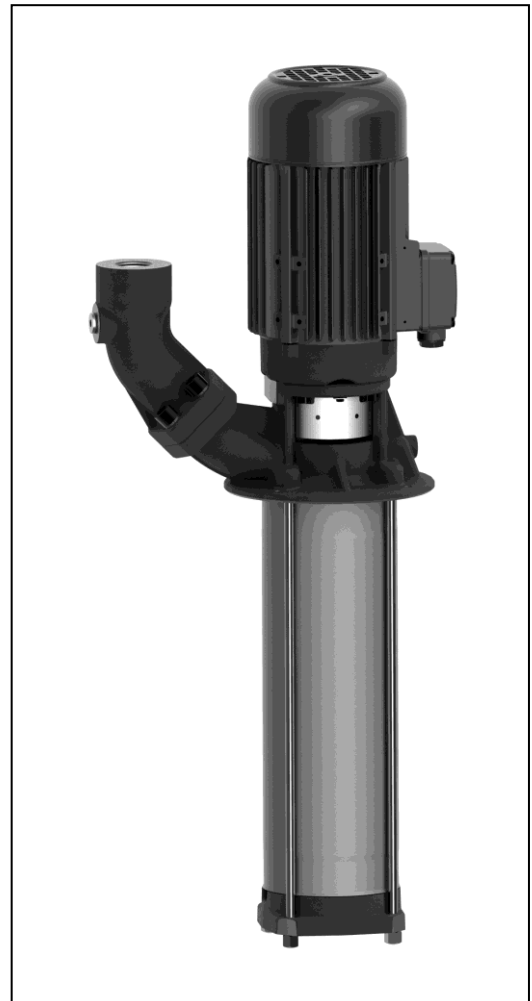

Brinkmann Pumpen
K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2 D-58791 Werdohl
Tel.: +49-2392 / 5006-0
Fax.: +49-2392 / 5006-180

Subject to change without prior notice.

www.brinkmannpumps.de
sales@brinkmannpumps.de

Order - No.: BE3920 ENGLISH

Brinkmann Immersions pumps of the series TH/STH2 ... TH/STH6

Contents

| | | | | | |
|---|-----------------------------------|-----|----|---------------------------------|-------|
| 1 | Indication to the manual | 2 | 9 | Trouble shooter's guide..... | 12 |
| 2 | Description of product | 2-8 | 10 | Spare part | 13-14 |
| 3 | Safety instructions | 9 | 11 | Repair | 14-15 |
| 4 | Transport and storage | 9 | 12 | Disposal | 15 |
| 5 | Installation and Connection | 10 | 13 | Declarations of conformity..... | 16-17 |
| 6 | Start up / Shut down..... | 11 | | | |
| 7 | Operation..... | 11 | | | |
| 8 | Servicing and Maintenance | 11 | | | |

1 Indication to the manual

This operating manual gives basic instructions which are to be observed during installation, operation and maintenance of the pump. It is therefore imperative that this manual be read by the responsible personnel and operator prior to assembly and commissioning. It is always to be kept available at the installation site.

1.1 Identification of safety instructions in the operating manual

Safety instructions given in this manual non-compliance with which would affect **safety** are identified by the following symbol



Safety sign according with ISO 3864 – B.3.1

or where **electrical safety** is involved, with:



Safety sign according with ISO 3864 – B.3.6

Where non-compliance with the safety instructions may cause a risk to the machine and it's function the word

ATTENTION

is inserted.

2 Description of product

2.1 General description of the pump

Pumps of this type are multi-stage rotary pumps. Series TH/STH use closed impellers in order to minimizing power consumption and to optimize hydraulic pump efficiencies. In addition, the TH/STH series offers high pressures at short immersion depths.

The pump shaft and the motor shaft are connected by a coupling. The pump shaft is sealed by a rotating mechanical seal. The pump is protected again impurity by a filter. Pump and motor form a compact and space-saving unit.

Vertically mounted pumps are equipped with a mounting flange. The pump end immerses into the tank and the motor extends vertically above the tank.

2.2 Intended use

The immersion pumps of the series TH/STH have been especially developed to supply internally cooled tools with coolant fluid within the limiting application in accordance with table 1.

Limit of Application (Table 1)

| Type | TH/STH2...6 |
|--|---|
| Mediums | Industry water, cooling emulsions, cooling- and cutting-oils |
| Kinetic viscosity of the medium | 1 mm ² /s higher viscosity upon request |
| Temperature of medium | 0 ... 80 °C |
| Particle-size in the medium | 1 mm |
| max. operation pressure | 27 bar |
| min. delivery volume 50 / 60 Hz in l/min | (S)TH2 6 / 7 (S)TH4 10 / 12 (S)TH6 20 / 25 at special execution -Q 1% of Q max. |
| Dry running | The pumps are not suitable for dry running. |
| Switching-on frequency per hour | Motors less 3 kW max. 200 from 3 kW to 4.0 kW max. 40 from 5.0 kW to 10.3 kW max. 20 |
| Ambient temperature | 40 °C |
| Set-up altitude | 1000 m |

ATTENTION

The pumps are to be operated within their design limits. Applications outside of these limits are not approved. The manufacturer is not responsible for any damages resulting from use of the pumps in such applications.

2.3 Type Designation

Type Designation

(S)TH211 A 290

- Depth of immersion
- 50Hz (B = 60Hz)
- Number of stage
- Pump range

2.4 Technical data

50 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|---|---------------------------|----------------|----------------------------|----------------------------------|-------------|----------------------------------|
| (S)TH203A190 | 1.9 | 36 | 291 | 190 | 14.9 | 0.48 | 58 |
| (S)TH204A190 | 2.2 | | | | 15.0 | | |
| (S)TH205A190 | 2.8 | | | | 15.1 | | |
| (S)TH206A190 | 3.4 | | | | 15.2 | | |
| (S)TH207A290 | 4 | 38 | | 290 | 15.7 | | |
| (S)TH208A290 | 4.4 | | | | 15.8 | | |
| (S)TH209A290 | 5.0 | | | | 15.9 | | |
| (S)TH210A290 | 5.8 | | | | 16.0 | | |
| (S)TH211A290 | 6.2 | 38 | 332 | 290 | 17.4 | 0.63 | 58 |
| (S)TH212A390 | 6.8 | 42 | | 390 | 17.9 | | |
| (S)TH213A390 | 7.5 | 42 | 332 | 390 | 20.0 | 0.75 | 58 |
| (S)TH214A390 | 8.2 | | | | 20.1 | | |
| (S)TH215A390 | 9.0 | 42 | 332 | 390 | 21.4 | 0.92 | 58 |
| (S)TH216A390 | 9.5 | | | | 21.5 | | |
| (S)TH217A490 | 10.0 | | | 490 | 22.1 | | |
| (S)TH218A490 | 10.6 | | | | 22.2 | | |
| (S)TH219A490 | 11.2 | 45 | 359 | 490 | 24.1 | 1.1 | 58 |
| (S)TH220A490 | 11.8 | | | | 24.2 | | |
| (S)TH221A490 | 12.2 | | | | 24.3 | | |
| (S)TH222A590 | 12.8 | | | 590 | 24.9 | | |
| (S)TH223A590 | 13.7 | 45 | 381 | 590 | 31.0 | 1.3 | 63 |
| (S)TH224A590 | 14.1 | | | | 31.2 | | |
| (S)TH225A590 | 14.8 | 45 | 381 | 590 | 31.3 | 1.5 | 63 |
| (S)TH226A590 | 15.5 | | | | 31.5 | | |
| (S)TH227A690 | 16.0 | | | 690 | 32.4 | | |
| (S)TH228A690 | 16.8 | | | | 32.5 | | |
| (S)TH229A690 | 17.5 | 45 | 407 | 690 | 34.3 | 1.7 | 63 |
| (S)TH230A690 | 18 | | | | 34.4 | | |
| (S)TH231A690 | 18.5 | | | | 34.5 | | |
| (S)TH232A790 | 19.0 | | | 790 | 36.4 | | |
| (S)TH233A790 | 19.6 | 45 | 439 | 790 | 40.9 | 1.9 | 63 |
| (S)TH234A790 | 20.2 | | | | 41.0 | | |
| (S)TH235A790 | 20.8 | | | | 41.1 | | |
| (S)TH236A790 | 21.5 | | | | 41.2 | | |
| (S)TH237A890 | 22.0 | 48 | 439 | 890 | 43.0 | 2.2 | 63 |
| (S)TH238A890 | 22.6 | | | | 43.1 | | |
| (S)TH239A890 | 23.2 | | | | 43.2 | | |
| (S)TH240A890 | 24.0 | | | | 43.3 | | |
| (S)TH241A890 | 24.5 | | | | 43.4 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m.

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

50 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|---|---------------------------|----------------|----------------------------|----------------------------------|-------------|----------------------------------|
| (S)TH403A190 | 2.0 | 70 | 291 | 190 | 14.9 | 0.48 | 58 |
| (S)TH404A190 | 2.8 | | | | 15.0 | | |
| (S)TH405A190 | 3.8 | | | | 15.1 | | |
| (S)TH406A190 | 4.2 | 72 | 332 | 190 | 16.5 | 0.63 | 58 |
| (S)TH407A290 | 5.1 | 75 | 332 | 290 | 17.9 | 0.75 | 58 |
| (S)TH408A290 | 5.9 | | | | 18.0 | | |
| (S)TH409A290 | 6.6 | 75 | 332 | 290 | 18.5 | 0.85 | 58 |
| (S)TH410A290 | 7.3 | 80 | 332 | 290 | 19.0 | 0.92 | 58 |
| (S)TH411A290 | 8.0 | 80 | 359 | 290 | 20.1 | 1.1 | 58 |
| (S)TH412A390 | 8.8 | | | 390 | 20.6 | | |
| (S)TH413A390 | 9.2 | 80 | 381 | 390 | 27.6 | 1.3 | 63 |
| (S)TH414A390 | 10.1 | 85 | 381 | 390 | 28.1 | 1.5 | 63 |
| (S)TH415A390 | 11.0 | | | | 28.2 | | |
| (S)TH416A390 | 11.9 | 85 | 407 | 390 | 30.9 | 1.7 | 63 |
| (S)TH417A490 | 12.5 | | | 490 | 31.4 | | |
| (S)TH418A490 | 13.2 | 85 | 439 | 490 | 35.6 | 1.9 | 63 |
| (S)TH419A490 | 14.0 | | | | 35.9 | | |
| (S)TH420A490 | 14.8 | 85 | 439 | 490 | 36.0 | 2.2 | 63 |
| (S)TH421A490 | 15.6 | | | | 36.1 | | |
| (S)TH422A590 | 16.2 | | | 590 | 36.6 | | |
| (S)TH423A590 | 17.0 | 90 | 439 | 590 | 37.2 | 2.6 | 63 |
| (S)TH424A590 | 17.8 | | | | 37.3 | | |
| (S)TH425A590 | 18.6 | | | | 37.4 | | |
| (S)TH426A590 | 19.2 | | | | 37.5 | | |
| (S)TH427A690 | 20.0 | | | 690 | 38.0 | | |
| (S)TH428A690 | 20.8 | 90 | 432 | 690 | 50.0 | 3.0 | 71 |
| (S)TH429A690 | 21.7 | | | | 50.2 | | |
| (S)TH430A690 | 22.4 | 90 | 432 | 690 | 50.4 | 3.3 | 71 |
| (S)TH431A690 | 23.2 | | | | 50.6 | | |
| (S)TH432A790 | 24.0 | | | 790 | 51.4 | | |
| (S)TH433A790 | 24.8 | 90 | 432 | 790 | 52.6 | 4.0 | 71 |
| (S)TH434A790 | 25.4 | | | | 52.7 | | |
| (S)TH435A790 | 26.0 | | | | 52.8 | | |
| (S)TH436A790 | 27.0 | | | | 53.0 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

50 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|--|------------------------------|----------------|-------------------------------|----------------------------------|-------------|-------------------------------------|
| (S)TH603A190 | 2.0 | 140 | 291 | 190 | 15.3 | 0.48 | 58 |
| (S)TH604A190 | 2.8 | 140 | 332 | 190 | 16.8 | 0.63 | 58 |
| (S)TH605A240 | 3.8 | 140 | 332 | 240 | 17.8 | 0.75 | 58 |
| (S)TH606A240 | 4.2 | 140 | 332 | 240 | 18.0 | 0.92 | 58 |
| (S)TH607A290 | 5.2 | 140 | 359 | 290 | 19.5 | 1.1 | 58 |
| (S)TH608A290 | 6.0 | 140 | 381 | 290 | 26.2 | 1.3 | 63 |
| (S)TH609A340 | 6.8 | 140 | 381 | 340 | 26.8 | 1.5 | 63 |
| (S)TH610A340 | 7.6 | 140 | | | 27.0 | | |
| (S)TH611A390 | 8.1 | 145 | 407 | 390 | 29.5 | 1.7 | 63 |
| (S)TH612A390 | 9.0 | 150 | 439 | 390 | 34.0 | 1.9 | 63 |
| (S)TH613A490 | 9.8 | 150 | 439 | 490 | 35.0 | 2.2 | 63 |
| (S)TH614A490 | 10.4 | | | | 35.2 | | |
| (S)TH615A490 | 11.2 | | | | 35.5 | | |
| (S)TH616A490 | 12.0 | 160 | 439 | 490 | 36.3 | 2.6 | 63 |
| (S)TH617A590 | 12.8 | | | 590 | 36.8 | | |
| (S)TH618A590 | 13.2 | | | | 37.0 | | |
| (S)TH619A590 | 14.1 | 160 | 432 | 590 | 48.3 | 3.3 | 71 |
| (S)TH620A590 | 15.1 | | | | 48.5 | | |
| (S)TH621A690 | 16.0 | | | 690 | 49.5 | | |
| (S)TH622A690 | 16.8 | 170 | 432 | 690 | 50.1 | 4.0 | 71 |
| (S)TH623A690 | 17.6 | | | | 50.3 | | |
| (S)TH624A690 | 18.1 | | | | 50.5 | | |
| (S)TH625A790 | 19.0 | | | 790 | 51.2 | | |
| (S)TH626A790 | 19.8 | | | | 51.4 | | |
| (S)TH627A790 | 20.5 | 170 | 462 | 790 | 58.8 | 5.0 | 71 |
| (S)TH628A790 | 21.2 | | | | 59.0 | | |
| (S)TH629A890 | 22.0 | | | 890 | 60.0 | | |
| (S)TH630A890 | 22.8 | | | | 60.2 | | |
| (S)TH631A890 | 23.5 | | | | 60.4 | | |
| (S)TH632A890 | 24.2 | | | | 60.6 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

60 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|---|---------------------------|----------------|----------------------------|----------------------------------|-------------|----------------------------------|
| (S)TH203B190 | 2.4 | 40 | 291 | 190 | 14.9 | 0.55 | 61 |
| (S)TH204B190 | 3.4 | 42 | | | 15.0 | | |
| (S)TH205B190 | 4.1 | | | | 15.1 | | |
| (S)TH206B190 | 5.1 | | | | 15.2 | | |
| (S)TH207B290 | 6 | 45 | 332 | 290 | 18.6 | 0.725 | 61 |
| (S)TH208B290 | 7.0 | | | | 18.7 | | |
| (S)TH209B290 | 7.8 | 45 | 332 | 290 | 19.2 | 0,86 | 61 |
| (S)TH210B290 | 8.8 | 45 | 332 | 290 | 20.1 | 0.98 | 61 |
| (S)TH211B290 | 9.6 | 48 | 332 | 290 | 20.3 | 1.06 | 61 |
| (S)TH212B390 | 10.2 | | | 390 | 20.4 | | |
| (S)TH213B390 | 11.2 | | | | 20.5 | | |
| (S)TH214B390 | 12.0 | 48 | 359 | 390 | 21.7 | 1.27 | 61 |
| (S)TH215B390 | 12.8 | | | | 21.8 | | |
| (S)TH216B390 | 13.8 | 50 | 381 | 390 | 28.0 | 1.49 | 66 |
| (S)TH217B490 | 14.5 | 50 | 381 | 490 | 30.2 | 1.75 | 66 |
| (S)TH218B490 | 15.5 | | | | 30.3 | | |
| (S)TH219B490 | 16.4 | | | | 30.4 | | |
| (S)TH220B490 | 17.2 | 52 | 407 | 490 | 32.5 | 1.95 | 66 |
| (S)TH221B490 | 18.0 | | | | 32.6 | | |
| (S)TH222B590 | 19.0 | 55 | 439 | 590 | 37.4 | 2.18 | 66 |
| (S)TH223B590 | 19.9 | | | | 37.5 | | |
| (S)TH224B590 | 20.8 | 55 | 439 | 590 | 38.2 | 2.55 | 66 |
| (S)TH225B590 | 21.8 | | | | 38.4 | | |
| (S)TH226B590 | 22.5 | | | | 38.5 | | |
| (S)TH227B690 | 23.2 | | | 690 | 39.1 | | |
| (S)TH228B690 | 24.1 | 55 | 439 | 690 | 40.2 | 2.94 | 66 |
| (S)TH229B690 | 25.0 | | | | 40.3 | | |
| (S)TH230B690 | 26.0 | | | | 40.4 | | |
| (S)TH231B690 | 26.5 | | | | 40.5 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

60 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|---|---------------------------|----------------|----------------------------|----------------------------------|-------------|----------------------------------|
| (S)TH403B190 | 3.2 | 84 | 291 | 190 | 15.4 | 0.55 | 61 |
| (S)TH404B190 | 4.2 | 84 | 332 | 190 | 16.7 | 0.725 | 61 |
| (S)TH405B190 | 5.3 | 84 | 332 | 190 | 17.2 | 0.86 | 61 |
| (S)TH406B190 | 6.2 | 88 | 332 | 190 | 18.2 | 1.06 | 61 |
| (S)TH407B290 | 7.6 | 88 | 359 | 290 | 19.4 | 1.27 | 61 |
| (S)TH408B290 | 8.3 | | | | 19.5 | | |
| (S)TH409B290 | 9.5 | 92 | 381 | 290 | 27.0 | 1.49 | 66 |
| (S)TH410B290 | 10.6 | 92 | 381 | 290 | 27.2 | 1.75 | 66 |
| (S)TH411B290 | 11.8 | 95 | 407 | 290 | 29.4 | 1.95 | |
| (S)TH412B390 | 12.8 | | | 390 | 30.0 | | |
| (S)TH413B390 | 13.9 | 95 | 439 | 390 | 35.0 | 2.18 | 66 |
| (S)TH414B390 | 15.0 | 100 | 439 | 390 | 35.5 | 2.55 | 66 |
| (S)TH415B390 | 16.0 | | | | 35.6 | | |
| (S)TH416B390 | 17.1 | 100 | 439 | 390 | 36.0 | 2.94 | 66 |
| (S)TH417B490 | 18.1 | | | 490 | 36.1 | | |
| (S)TH418B490 | 19.2 | | | | 36.2 | | |
| (S)TH419B490 | 20.2 | 105 | 432 | 490 | 47.9 | 3.8 | 75 |
| (S)TH420B490 | 21.8 | | | | 48.0 | | |
| (S)TH421B490 | 22.5 | | | | 48.1 | | |
| (S)TH422B590 | 23.8 | | | 590 | 48.3 | | |
| (S)TH423B590 | 24.8 | 105 | 432 | 590 | 49.5 | 4.55 | 75 |
| (S)TH424B590 | 26.0 | | | | 49.7 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

60 Hz

| Type | Max. del. pressure bar / spec. weight 1 | Max. del. volume l/min | Height H mm | Depth of immersion h mm | Weight TH ¹⁾ kg | Power kW | Noise level ²⁾ dBA |
|--------------|---|---------------------------|----------------|----------------------------|----------------------------------|-------------|----------------------------------|
| (S)TH603B190 | 3.2 | 170 | 332 | 190 | 16.8 | 0.86 | 61 |
| (S)TH604B190 | 4.2 | 170 | 332 | 190 | 17.5 | 1.06 | 61 |
| (S)TH605B240 | 5.2 | 170 | 359 | 240 | 18.5 | 1.27 | 61 |
| (S)TH606B240 | 6.2 | 175 | 381 | 240 | 25.0 | 1.75 | 66 |
| (S)TH607B290 | 7.8 | 175 | 407 | 290 | 29.0 | 1.95 | 66 |
| (S)TH608B290 | 8.4 | 185 | 439 | 290 | 32.0 | 2.18 | 66 |
| (S)TH609B340 | 9.8 | 185 | 439 | 340 | 35.0 | 2.55 | 66 |
| (S)TH610B340 | 10.8 | 195 | 439 | 340 | 36.0 | 2.94 | 66 |
| (S)TH611B390 | 12.0 | | | 390 | 36.6 | | |
| (S)TH612B390 | 13.0 | 195 | 432 | 390 | 48.0 | 3.45 | 75 |
| (S)TH613B490 | 14.0 | 195 | 432 | 490 | 49.9 | 3.8 | 75 |
| (S)TH614B490 | 15.2 | | | | 50.1 | | |
| (S)TH615B490 | 16.2 | 200 | 432 | 490 | 51.8 | 4.55 | 75 |
| (S)TH616B490 | 17.8 | | | | 52.3 | | |
| (S)TH617B590 | 18.4 | | | 590 | 52.8 | | |
| (S)TH618B590 | 19.8 | 200 | 462 | 590 | 56.8 | 5.75 | 75 |
| (S)TH619B590 | 20.8 | | | | 56.9 | | |
| (S)TH620B590 | 22.0 | | | | 57.0 | | |
| (S)TH621B690 | 23.0 | | | 690 | 57.2 | | |
| (S)TH622B690 | 24.0 | | | | 57.3 | | |
| (S)TH623B690 | 25.2 | 210 | 462 | 690 | 61.0 | 6.3 | 75 |
| (S)TH624B690 | 26.2 | | | | 61.2 | | |

1) Weight STH = Weight TH + 2 kg

2) Noise emissions measured in accordance with
DIN 45635 at a distance of 1 m

The motor is surface-cooled and compliant with
DIN IEC 34 and EN 60034 (protection degree IP 55).

3 Safety instructions

When operating the pump, the safety instructions contained in this manual, the relevant national accident prevention regulations and any other service and safety instructions issued by the plant operator are to be observed.

3.1 Hazards in the event of non-compliance with the safety instructions

Non-compliance with the safety instructions may produce a risk to the personnel as well as to the environment and the machine and results in a loss of any right to claim damages.

For example, non-compliance may involve the following hazards:

- Failure of important functions of the machines/plant
- Failure of specified procedures of maintenance and repair
- Exposure of people to electrical, mechanical and chemical hazards
- Endangering the environment due to hazardous substances being released

3.2 Unauthorized modes of operation



- Pump may not be used in potentially explosive environments!
- Pump and discharge piping are not designed to hold any weight and may not be used as a step ladder.

3.3 Remaining Risk



Risk of Injury!

Risk of squeezing or crushing body parts when installing or removing the pump exists. Proper and secured lifting tools must be used.

Risk of burns!

The pump must have cooled down sufficiently prior to commencing any repair, maintenance or installation.

3.4 Qualification and training of operating personnel

The personnel responsible for operation, maintenance, inspection and assembly must be adequately qualified. Scope of responsibility and supervision of the personnel must be exactly defined by the plant operator. If the staff does not have the necessary knowledge, they must be trained and instructed, which may be performed by the machine manufacturer or supplier on behalf of the plant operator. Moreover, the plant operator is to make sure that the contents of the operating manual are fully understood by the personnel.

3.5 Safety instructions relevant for operation

- If hot or cold machine components involve hazards, they must be guarded against accidental contact.
- Guards for moving parts (e.g. coupling) must not be removed from the machine while in operation.
- Any leakage of hazardous (e.g. explosive, toxic, hot) fluids (e.g. from the shaft seal) must be drained away so as to prevent any risk to persons or the environment. Statutory regulations are to be complied with.
- Hazards resulting from electricity are to be prevented (see for example, the VDE Specifications and the bye-laws of the local power supply utilities).
- The pumps' stability against falling over is not ensured unless it is properly mounted onto the tank.
- The female threads on the motor MUST NOT be used to lift the entire pump and motor assembly.

3.6 Safety instructions relevant for maintenance, inspection and assembly work

Any work on the machine shall only be performed when it is at a standstill, it being imperative that the procedure for shutting down the machine described in this manual be followed.

Pumps and pump units which convey hazardous media must be decontaminated.

On completion of work all safety and protective facilities must be re-installed and made operative again.

Prior to restarting the machine, the instructions listed under "Start up" are to be observed.

3.7 Signs on the pump

It is imperative that signs affixed to the machine, e.g.:

- arrow indicating the direction of rotation
 - symbols indicating fluid connections
- be observed and kept legible.

3.8 Unauthorized alterations and production of spare parts

Any modification may be made to the machine only after consultation with the manufacturer. Using spare parts and accessories authorized by the manufacturer is in the interest of safety. Use of other parts may exempt the manufacturer from any liability.

4 Transport and storage

Protect the pump against damage when transporting.

The pumps may only be transported in a horizontal position and hooks or straps must be attached on the motor and pump end.

Do not use the pump shaft for connecting any transportation aids such as hooks or straps.

Pumps must be drained prior to their storage.

Store pump in dry and protected areas and protect it against penetration of foreign bodies.

Always store pump above the freezing point!

5 Installation and Connection

5.1 Mechanical installation

During any assembly or disassembly process the pumps must be secured against tipping trough ropes for example at all times.


Pumps must be mounted securely. Piping, tank and pumps must be mounted without any tension.

The inlet is at the bottom of the immersed pump body. The distance between the inlet and the tank bottom must be so large that the inlet cannot be blocked by deposits during longer shutdowns.

The leakage is collected in a leakage chamber and drained off by the leakage hole into the tank. During the assembling of the pump, be sure that the leakage hole is free.

To obtain the full flow rate it is recommended to choose for the pipework the nominal bore diameter of the pumps cross section for connection. Therefore pipe bends should be used, not pipe angles!

The pipework must be qualified for occuring hydraulic pressure.

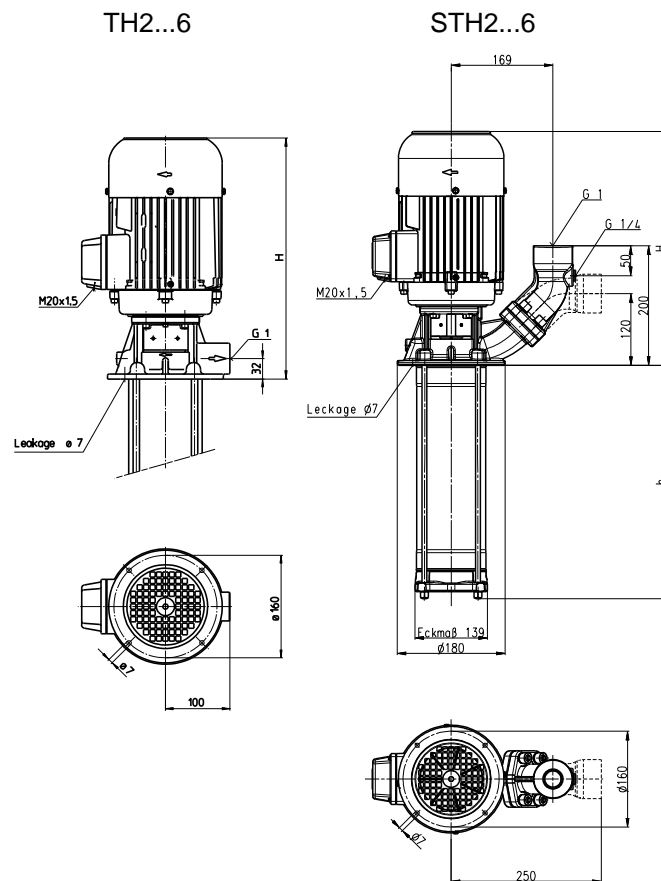

ATTENTION

Pay attention of the max. tightening torque for piping connection

| Type | Pipe connection | Cast iron | Brass |
|----------|-----------------|-----------|-------|
| TH2...6 | G 1 | 90 Nm | 50 Nm |
| STH2...6 | G 1 | 90 Nm | - |

When installed the space around the pump must be large enough to provide sufficient cooling of the motor.

Do not prop up the pressure line via the joining socket.



The pump must be mounted in that way that rotating parts under the cover of the coolant tank can not be touched!

5.2 Electric wiring



All service work must be carried out by qualified service personnel. Pump must be disconnected from the power source and all rotating parts must stand still. Reassure that pump is disconnected from power source and cannot be switched on. Verify that there is no voltage at the terminal board!

According to the European Standard EN809 a motor overload must be installed and properly set to the full load amps stated on the pump name plate.

It is the responsibility of the machine operator to decide whether or not an additional emergency switch must be installed.

5.2.1 Circuit




Tension voltage and frequency must correspond with the shown specification on the nameplate.


The pump must be wired so that a solid long term electrical connection is ensured. Establish a solid ground connection.

The electrical wiring must be performed according to the wiring diagram shown inside the terminal box cover. (Please see above sample wiring diagrams)

Wiring diagram e.g.

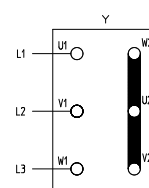

Star connection
3 x 400 V, 50 Hz
resp. 380-415 V, 50 Hz

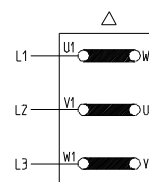

Delta connection
3 x 230 V, 50 Hz
resp. 220-240 V, 50 Hz

There may be no foreign objects such as dirt, particles or humidity inside the terminal board.

Mount terminal board cover to motor tight against dust and humidity and close up all unused wiring ports.

ATTENTION

When Variable Frequency Drives are used interfering signals might occur.

Non-sinus shaped supply voltage from a variable frequency drive might result in elevated motor temperatures.

6 Start up / Shut down

6.1 Start up

ATTENTION

Switch off at the mains.

After connection the electrical wires, close the terminal box. Briefly start the motor (max. 30 sec.) and check the rotation according to the arrow on the top of the motor.

If the direction is incorrect change over two of the power leads.


6.2 Shut down

All service work must be carried out by qualified service personnel. Pump must be disconnected from the power source and all rotating parts must stand still. Reassure that pump is disconnected from power source and cannot be switched on. Verify that there is no voltage at the terminal board! Open terminal box and disconnect the power leads. Empty out the pump.

7 Operation

Liquid level

Be sure that the suction hole of the pump body is immersed about 46 mm in the liquid (min. liquid level) before starting up the motor.

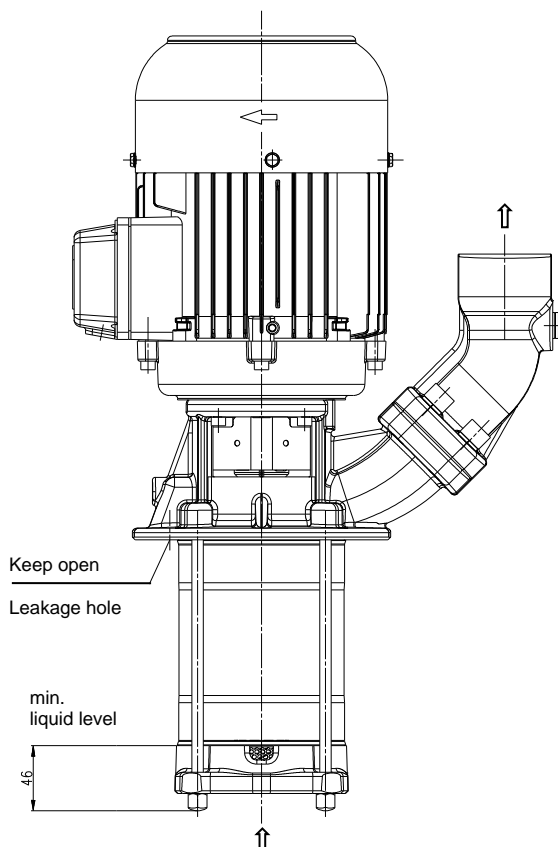

If the pump should lock up and cease, shut pump down (see 6.2) and disconnect from power supply. Pump must be uninstalled and removed from the system prior to its repair.

8 Servicing and Maintenance

ATTENTION

The surface of the motor must be kept free of dirt.


The motor shaft is spinning in permanently greased ball bearings (with special grease and increased bearing play) and does not require any special maintenance.

9 Trouble shooter's guide

| Fault | Cause | Remedy |
|--------------------------------------|---|--|
| Motor does not start, no motor noise | At least two of the power supply leads have failed | Check fuses, terminals and supply leads . |
| | Overload has tripped | Inspect overload |
| Motor does not start, humming noise | One of the supply leads has failed | See above |
| | Impeller faulty Motor bearing faulty | Replace impeller Replace bearing |
| Overload trips | Pump locked up mechanically | Inspect pump hydraulics |
| | High on/of cycling frequency | Check application |
| Power consumption is too high | Wrong direction of rotation of impeller | See above |
| | Lime or other deposits mechanical friction | Clean pump mechanism repair pump |
| Motor overheats | High on/off cycling frequency Wrong power supply (voltage or cycles) | See above Power supply must correspond with name plate rating |
| | Insufficient cooling | Check air flow at motor fan |
| Pump does not pump | liquid level too low | Fill up liquid |
| | Pump mechanism faulty Pipe blocked | replace pump mechanism Clean pipe |
| Insufficient flow and pressure | Wrong direction of rotation of impeller | Change over two power supply leads |
| | Pump mechanism silted up Worn pump mechanism | Clean pump mechanism Replace pump mechanism |
| Incorrect flow or pressure | Wrong power supply (voltage or cycles) | Power supply must correspond with name plate rating |
| Running noise/Vibration | Foreign objects in pump end | Remove foreign objects |
| | Impeller damaged | Replace impeller |
| | Bearing/Bushing broken | Replace bearing/bushing |

10 Spare part

10.1 Spare part list for the immersion pumps of the series TH/STH2 ... 6

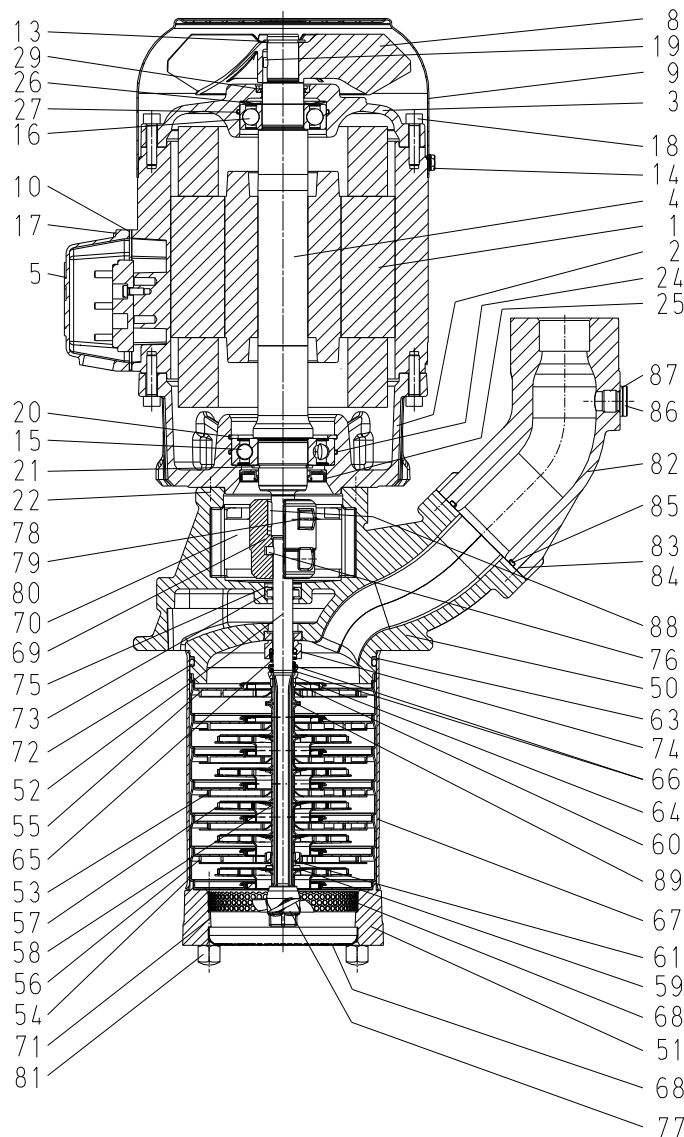

| | | |
|----|--|----------|
| 77 | Suction screw | |
| 78 | Hexagon socket head cap screw | DIN 912 |
| 79 | Serrated lock washer | DIN 6798 |
| 80 | Hexagon nut | DIN 934 |
| 81 | Hexagon cap nuts | DIN 917 |
| 82 | Joining socket STH | |
| 83 | Socket head cap screw STH | DIN 912 |
| 84 | Spring washer STH | DIN 7980 |
| 85 | O-ring STH | |
| 86 | Screw plug STH | DIN 908 |
| 87 | Sealing ring STH | DIN 7603 |
| 88 | Woodruff key | DIN 6888 |
| 89 | Distance plate instead of impeller at empty stage for special depth of immersion | |

| Item | Description | |
|------|---|----------|
| 1 | Stator with terminal board | |
| 2 | Motor flange | |
| 3 | End shield | |
| 4 | Motor shaft with rotor | |
| 5 | Terminal box | |
| 8 | Fan | |
| 9 | Fan cover | |
| 10 | Gasket | |
| 13 | Retaining ring | |
| 13 | Retaining ring 1.3...2.6 kW | DIN 471 |
| 14 | Thread rolling screw from 1.3 kW and over | DIN 7500 |
| 15 | Ball bearing | DIN 625 |
| 15 | Ball bearing 1.3...2.6 kW | DIN 628 |
| 16 | Ball bearing | DIN 625 |
| 17 | Slotted cheese head screw | DIN 84 |
| 18 | Stud bolt with bond up to 1.1 kW | |
| 18 | Hexagon socket head cap screw from 1.3 kW and over | DIN 912 |
| 19 | Parallel pin | DIN 7 |
| 20 | Retaining ring | DIN 472 |
| 21 | Retaining ring | DIN 471 |
| 22 | Socket head cap screw | DIN 912 |
| 24 | O-ring from 1.3 kW and over | |
| 25 | Rotary shaft seal from 0.75 kW and over | |
| 26 | Compensation disk from 1.3 kW and over | |
| 27 | O-ring from 1.3 kW and over | |
| 29 | Rotary shaft seal | |
| 50 | Pump body | |
| 51 | Intake cover | |
| 52 | Pump shaft | |
| 53 | Diffusor with sliding ring | |
| 54 | Entering stage with sliding ring | |
| 55 | Outflow stage (S)TH2...(S)TH4 | |
| 56 | Bearing stage with sliding ring | |
| 57 | Impeller | |
| 58 | Spacer-long 2 x per stage | |
| 59 | Spacer-short 1 x per bearing stage | |
| 60 | Sliding ring | |
| 61 | Shaft sleeve | |
| 63 | Spiral backup ring | |
| 64 | Mech. seal stop ring cover | |
| 65 | Mech. seal stop half-ring | |
| 66 | Mech. seal washer up to (S)TH221A (S)TH421A and (S)TH616A (S)TH216B, (S)TH414B and (S)TH614B | |
| 66 | Mech. seal stop ring from (S)TH222A (S)TH422A and (S)TH617A (S)TH217B,(S)TH415B and (S)TH615B | |
| 67 | Pump casing | |
| 68 | Sieve | |
| 69 | Clamp coupling | |
| 70 | Coupling shield with M5 screw | |
| 71 | Stud bolt | |
| 72 | O-ring | |
| 73 | Rotary shaft seal | |
| 74 | Mechanical seal | |
| 75 | Retaining ring | |
| 76 | Parallel pin | DIN 7 |

10.2 Indications to the spare part order

Spare parts are available from the supplier.
Standard commercially available parts are to be purchased in accordance with the model type.
The ordering of spare parts should contain the following details:

1. Pumptype

e.g. TH204A190

2. Pump No.

e.g. 1120233920

The date of the construction year is a component of the pumps type number.

3. Voltage. Frequency and Power

Take item 1, 2 and 3 from the nameplate

4. Spare part with item No.

e.g. Impeller item No. 57

11 Repair

11.1 Exchange the rotary mechanical seal: up to (S)TH221A, (S)TH421A , (S)TH616A (S)TH216B, (S)TH414B , (S)TH614B

- 1) Disconnect the pump from the power supply.
- 2) Loosen the M5 screws and pull out coupling shield (70). Remove clamp coupling (69.1. 69.2) and parallel pin (76).
- 3) Loosen and pull off the hexagon cap nuts (81), the stud bolt (71) and the pump casing (67) from the pump unit. Remove pump unit with pump shaft (52) from the pump body (50).
- 4) Take off rotating axial face seal unit (74.1-74.5) and mech. seal washer (66) from the shaft (52) and clean the shaft. Pay attention to the drilled hole for the parallel pin (76) that it is without any bur. Check the sliding surface for the rotary shaft seal (73) for any damage.
- 5) Remove complete seal (74.6. 74.7) from the pump body (50) and clean the seat.
- 6) Mounting of the new axial face seal :
Ensure that the sliding surfaces of the ring and the rotating axial face seal unit are free from grease and dirt.
Moisten the angle-sleeve (74.7) of the counter ring lightly with rinse water / (water with washing-up liquid) and push the unit into the seat of the pump body (50).
Slide the mech. seal washer (66) first and then the axial face seal (74.1-74.5) onto the pump shaft (52).
- 7) Lubricate lightly the lip of the rotary shaft seal (73) and push it into the pump body (50). Then insert the pump shaft (52) with the pump unit through the rotary shaft seal (73).
- 8) Fit together the coupling clamp (69) with the parallel pin (76) around the shafts, tighten the hexagon socket head cap screws (78) with the serrated lock washer (79) lightly.
Be sure that the key of the motor shaft (4) coincides with the key groove of the coupling clamp(69.1). Press the pump shaft (52) toward the motor and tighten the screws.
The distance between the two shaft ends **must be zero**.

- 9) Lubricate the O-ring seal (72) of the pump body (50), screw and put on the stud bolt (71), the hexagon cap nuts (81) and the pump casing (67).



- 10) Fit the coupling shield (70) into the pump body (50) and tighten the M5 screws.

- 11) Reconnect pump to the power supply.

Check direction of rotation!

Tightening torques for screwed connections

| Thread - Ø | M4 | M5 | M6 | M8 | M10 |
|------------------------|------|------|-----------------------------------|----------------------------------|-------|
| Strength classes | 4.8 | 4.8 | 8.8 | 8.8 | 8.8 |
| Tightening torque (Nm) | 1 Nm | 3 Nm | 4.5 Nm 20 Nm Clamp coupling | 15 Nm 30 Nm Clamp coupling | 30 Nm |

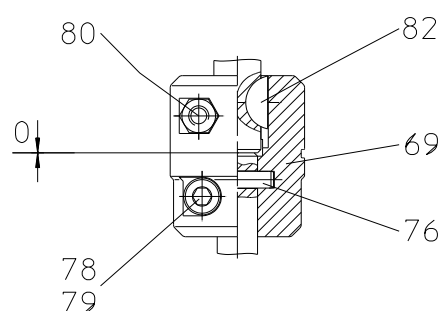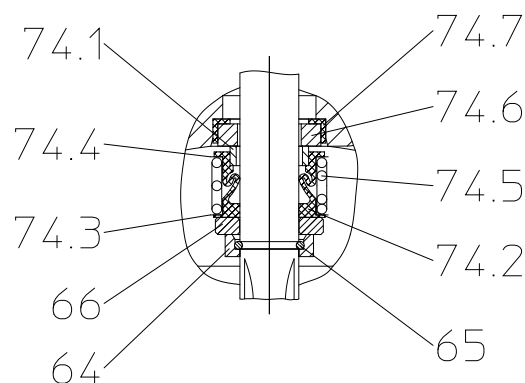



11.2 Exchange the rotary mechanical seal: from (S)TH222A, (S)TH422A , (S)TH617A (S)TH217B, (S)TH415B , (S)TH615B

- 1) Disconnect the pump from the power supply.
- 2) Loosen the M5 screws and pull out coupling shield (70). Remove clamp coupling (69.1. 69.2) and parallel pin (76).
- 3) Loosen and pull off the hexagon cap nuts (81), the stud bolt (71) and the pump casing (67) from the pump unit. Remove pump unit with pump shaft (52) from the pump body (50).
- 4) Take off rotating axial face seal unit (74.1-74.5) and mech. seal stop ring (66) from the shaft (52) and clean the shaft. Pay attention to the drilled hole for the parallel pin (76) that it is without any bur. Check the sliding surface for the rotary shaft seal (73) for any damage.
- 5) Remove complete seal (74.6. 74.7) from the pump body (50) and clean the seat.
- 6) Mounting of the new axial face seal :
Ensure that the sliding surfaces of the ring and the rotating axial face seal unit are free from grease and dirt.
Moisten the angle-sleeve (74.7) of the counter ring lightly with rinse water / (water with washing-up liquid) and push the unit into the seat of the pump body (50).
Slide the mech. seal stop ring (66) first and then the axial face seal (74.5-74.1) **(single part)** onto the pump shaft (52).
- 7) Lubricate lightly the lip of the rotary shaft seal (73) and push it into the pump body (50). Then insert the pump shaft (52) with the pump unit through the rotary shaft seal (73).
- 8) Fit together the coupling clamp (69) with the parallel pin (76) around the shafts, tighten the hexagon socket head cap screws (78) with the serrated lock washer (79) lightly.
Be sure that the key of the motor shaft (4) coincides with the key groove of the coupling clamp(69.1).
Press the pump shaft (52) toward the motor and tighten the screws.
The distance between the two shaft ends **must be zero**
- 9) Lubricate the O-ring seal (72) of the pump body (50), screw and put on the stud bolt (71), the hexagon cap nuts (81) and the pump casing (67).
- 10) Fit the coupling shield (70) into the pump body (50) and tighten the M5 screws.
- 11) Reconnect pump to the power supply.

Check direction of rotation!

Tightening torques for screwed connections

| Thread - Ø | M4 | M5 | M6 | M8 | M10 |
|------------------------|------|------|-----------------------------------|----------------------------------|-------|
| Strength classes | 4.8 | 4.8 | 8.8 | 8.8 | 8.8 |
| Tightening torque (Nm) | 1 Nm | 3 Nm | 4.5 Nm 20 Nm Clamp coupling | 15 Nm 30 Nm Clamp coupling | 30 Nm |

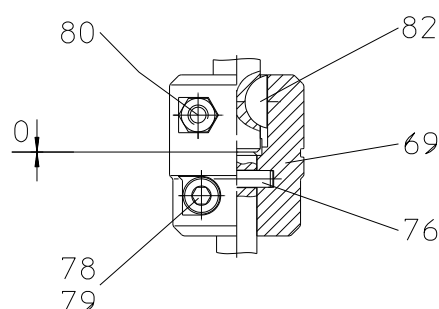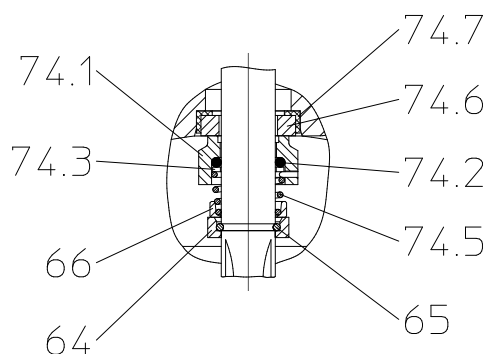

12 Disposal

When disposing of the pump or the packaging materials the local and national regulation for proper disposal must be complied with. Prior to its disposal, the pump must be completely drained and decontaminated if necessary.

13 Declarations of conformity

13.1 UK declaration of conformity



UK declaration of conformity

Manufacturer

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2
D-58791 Werdohl
Germany

This declaration of conformity is issued under the sole responsibility of Brinkmann Pumps and belongs to the following product.

Product name

Immersion pumps

Type **TH/STH2 ... 6**

The named product described above complies with the following statutory requirements of United Kingdom:

UK SI 2008 No. 1597 The Supply of Machinery (Safety) Regulations 2008

UK SI 2016 No. 1091 The Electromagnetic Compatibility Regulations 2016

UK SI 2020 No. 1647 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2020

The following exceptions in accordance with table 1, "Table of exempted applications" are claimed: No.12 (6a), No.15 (6b), No. 18 (6c)

The following designated standards and technical specification have been applied:

EN 809:1998+A1:2009+AC:2010

EN ISO 12100:2010

EN 60204-1:2018

EN IEC 61000-3-2 :2019

EN 61000-3-3 :2013+A1 :2019

EN IEC 61000-6-2 :2019

EN IEC 61000-6-3 :2021

EN IEC 63000 :2018

Additionally the following standard has been applied:

EN 60034-1 :2010/AC :2010

The instructions contained in the operating manual for installation and start up the pump have to be followed.

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co.
KG

Werdohl, 06.11.2023

.....
Dr.-Ing. Dirk Wenderott
Chief Product Officer (CPO)
Head of Engineering

Dr. H. Abou Dayé
K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2, D-58791 Werdohl
Representative of documentation

13.2 EC declaration of conformity

DEUTSCH / ENGLISH / FRANÇAIS / ESPAÑOL



EG-Konformitätserklärung

EC declaration of conformity / Déclaration de conformité CE / Declaración de conformidad CE

Hersteller / Manufacturer / Constructeur / Fabricante

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2, D-58791 Werdohl

Produktbezeichnung / Product name / Désignation du produit / Designación del producto

Tauchpumpen / Immersion pumps / Pompes plongeantes / Bombas de inmersión

Typ / Type / Tipo TH/STH2 ... 6

Das bezeichnete Produkt stimmt mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-Mitgliedsstaaten überein:

The named product conforms to the following Council Directives on approximation of laws of the EEC Member States:
Le produit sus-mentionné est conforme aux Directives du Conseil concernant le rapprochement des législations des Etats membres CEE:

El producto designado cumple con las Directivas del Consejo relativas a la aproximación de las legislaciones de los Estados Miembros de la CEE:

| | |
|-----------------------------------|---|
| 2006/42/EG | Richtlinie für Maschinen |
| 2006/42/EC | Council Directive for machinery |
| 2006/42/CE | Directive du Conseil pour les machines |
| 2006/42/CE | Directivas del Consejo para máquinas |
| 2014/30/EU | Richtlinie für elektromagnetische Verträglichkeit |
| 2014/30/EU | Council Directive for Electromagnetic compatibility |
| 2014/30/UE | Directive du Conseil pour Compatibilité électromagnétique |
| 2014/30/UE | Directivas del Consejo para Compatibilidad electromagnética |
| 2011/65/EU und 2015/863/EU | RoHS Richtlinien |
| 2011/65/EU and 2015/863/EU | RoHS Directives |
| 2011/65/UE et 2015/863/UE | Directives RoHS |
| 2011/65/UE y 2015/863/UE | RoHS Directivas |

Folgende Ausnahmen gem. Anhang III RoHS (2011/65/EU) werden in Anspruch genommen: 6a, 6b, 6c.

The following exceptions in accordance with appendix III RoHS (2011/65/ EU) are claimed: 6a, 6b, 6c.

Les exceptions suivantes selon l'annexe III RoHS (2011 / 65 / UE) sont revendiquées : 6a, 6b, 6c.

Las siguientes excepciones conforme al apéndice III RoHS (2011/65 / UE) son requeridas: 6a, 6b, 6c.

Hinsichtlich der elektrischen Gefahren wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG die Schutz-
ziele der Niederspannungsrichtlinie 2014/35/EU eingehalten.

With respect to potential electrical hazards as stated in appendix I No. 1.5.1 of the machine guide lines 2006/42/EC all
safety protection goals are met according to the low voltage guide lines 2014/35/EU.

Conformément à l'annexe I N° 1.5.1 de la Directive "Machines" (2006/42/CE) les objectifs de sécurité relatifs
au matériel électrique de la Directive "Basse Tension" 2014/35/UE ont été respectés.

Con respecto al potencial peligro eléctrico como se indica en el apéndice I No. 1.5.1 del manual de la máquina
2006/42/CE, todos los medios de protección de seguridad se encuentran según la guía de bajo voltaje 2014/35/UE.

Die Übereinstimmung mit den Vorschriften dieser Richtlinien wird nachgewiesen durch die vollständige Einhaltung
folgender Normen:

Conformity with the requirements of this Directives is testified by complete adherence to the following standards:

La conformité aux prescriptions de ces Directives est démontrée par la conformité intégrale avec les normes suivantes:

La conformidad con las prescripciones de estas directivas queda justificada por haber cumplido totalmente las siguientes normas:

Harmonisierte Europ. Normen / Harmonised Europ. Standards / Normes europ. harmonisées / Normas europ. Armonizadas

| | | | |
|---------------------------------------|-------------------------------|-------------------------------|-------------------------------|
| EN 809 :1998+A1 :2009+AC :2010 | EN ISO 12100 :2010 | EN 60204-1 :2018 | EN IEC 61000-3-2 :2019 |
| EN 61000-3-3 :2013+A1 :2019 | EN IEC 61000-6-2 :2019 | EN IEC 61000-6-3 :2021 | EN IEC 63000 :2018 |

Nationale Normen / National Standards / Normes nationales / Normas nacionales : **EN 60034-1 :2010/AC :2010**

Die Hinweise in der Betriebsanleitung für den Einbau und die Inbetriebnahme der Pumpe sind zu beachten.

The instructions contained in the operating manual for installation and start up the pump have to be followed.

Les indications d'installation / montage et de mise en service de la pompe prévues dans l'instruction d'emploi doivent être suivies.

Tenga en cuenta las instrucciones en el manual para la instalación y puesta en marcha de la bomba.

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co. KG

Werdohl, 06.11.2023

Dr.-Ing. Dirk Wenderott
Chief Product Officer (CPO)
Head of Engineering

Dr. H. Abou Dayé

K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2, D-58791 Werdohl

Dokumentationsbevollmächtigter / Representative of
documentation/ Mandataire de documentation /
Mandatario de documentación