6 Start up / Shut down

6.1 Start up

ATTENTION

Switch off at the mains.
After connection the electrical wires, close the terminal box. Briefly start the motor (max. 30 sec.) and check the rotation according to the arrow on the top of the motor.
If the direction is incorrect change over two of the power leads.

6.2 Shut down

All service work must be carried out by qualified service personnel. Pump must be disconnected from the power source and all rotating parts must stand still. Reassure that pump is disconnected from power source and cannot be switched on. Verify that there is no voltage at the terminal board! Open terminal box and disconnect the power leads. Empty out the pump.

7 Operation

Liquid level

According to the drawing shown below, the maximum liquid level must stay about 30 mm below the mounting flange, also ensure that the minimal liquid level for the STA pump is 150 mm before starting up the motor.

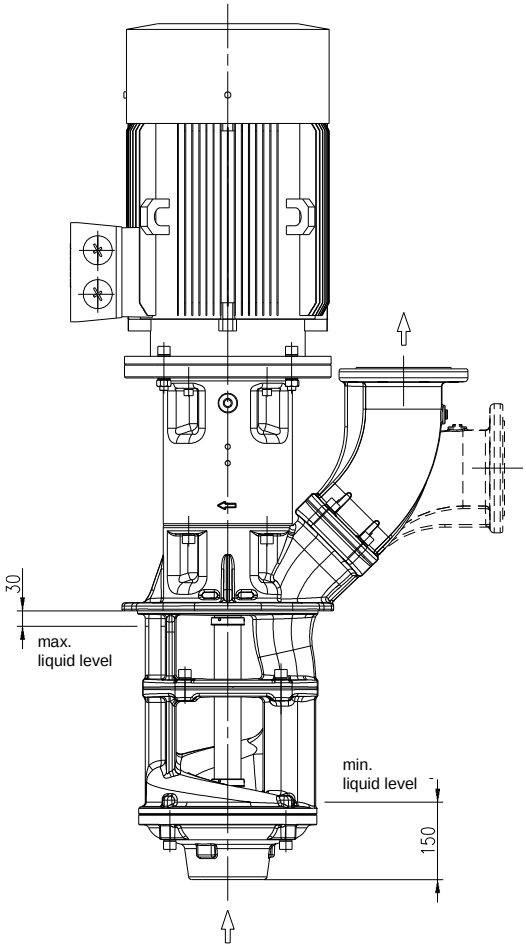

If the pump should lock up and cease, shut pump down (see 6.2) and disconnect from power supply. Pump must be uninstalled and removed from the system prior to its repair.

Attention! Potential Risk of Burning!

Surface temperatures above 50°C do occur during regular operation, i.e. on the surfaces of the motor and bearing housing.

It must be insured that the pump has cooled down sufficiently prior to performing any repair or maintenance work.

8 Servicing and Maintenance

ATTENTION

The surface of the motor must be kept free of dirt.

The motor shaft is spinning in permanently greased ball bearings (with special grease and increased bearing play) and does not require any special maintenance.

9 Trouble shooter's guide

Fault	Cause	Remedy
Motor does not start, no motor noise	At least two of the power supply leads have failed Overload has tripped	Check fuses, terminals and supply leads . Inspect overload
Motor does not start, humming noise	One of the supply leads has failed Impeller faulty Motor bearing faulty	See above Replace impeller Replace bearing
Overload trips	Pump locked up mechanically High on/of cycling frequency	Inspect pump hydraulics Check application
Power consumption is too high	Wrong direction of rotation of impeller Lime or other deposits mechanical friction	See above Clean pump mechanism repair pump
Motor overheats	High on/off cycling frequency Wrong power supply (voltage or cycles) Insufficient cooling	See above Power supply must correspond with name plate rating Check air flow at motor fan
Pump does not pump	liquid level too low Pump mechanism faulty Pipe blocked	Fill up liquid replace pump mechanism Clean pipe
Insufficient flow and pressure	Wrong direction of rotation of impeller Pump mechanism silted up Worn pump mechanism	Change over two power supply leads Clean pump mechanism Replace pump mechanism
Incorrect flow or pressure	Wrong power supply (voltage or cycles)	Power supply must correspond with name plate rating
Running noise/Vibration	Foreign objects in pump end Impeller damaged Bearing/Bushing broken	Remove foreign objects Replace impeller Replace bearing/bushing

10 Spare part

10.1 Spare part list for the immersion pumps of the series STA3600…STA4500

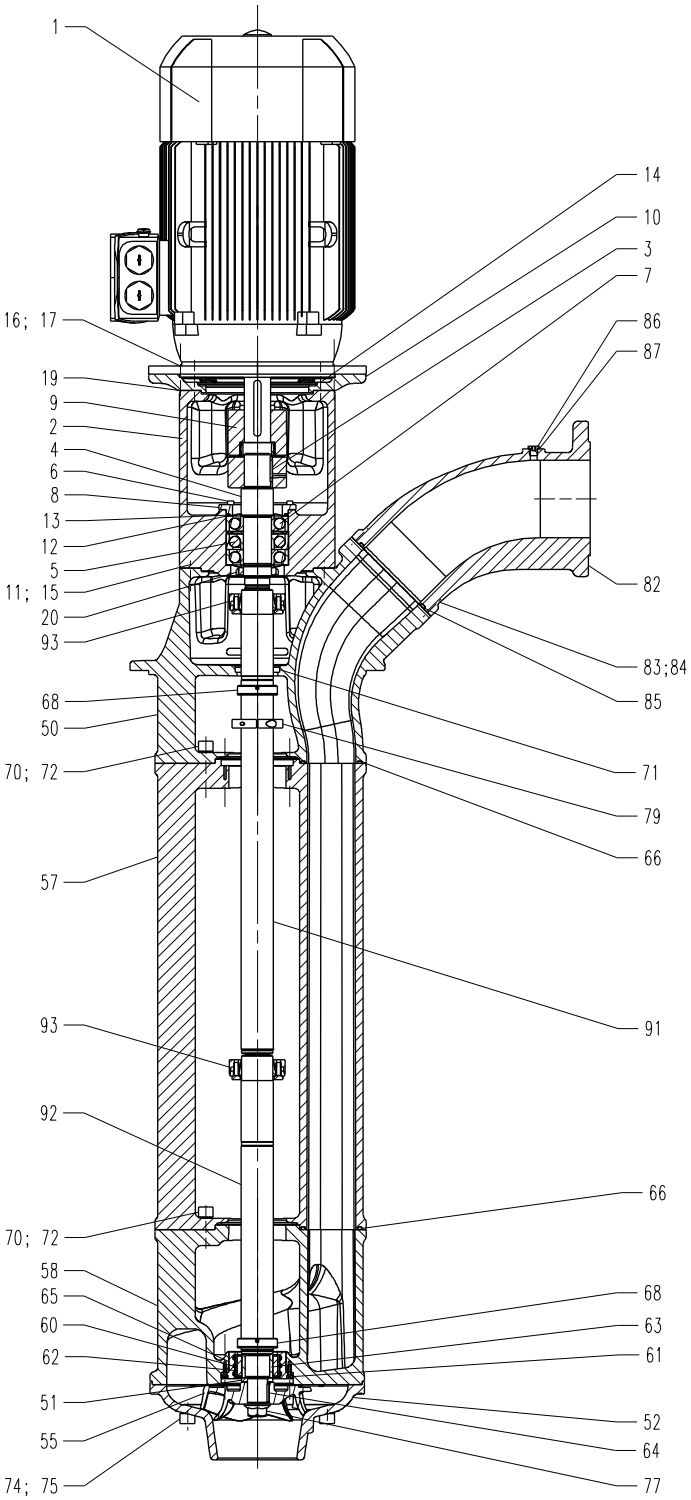

Item	Description		
1	Motor		
2	Bearing housing		
3	Woodruff key		
4	Bearing shaft		
5	Ball bearing	DIN	628
6	Socket head cap screw with lock	DIN	912
7	Ball bearing	DIN	628
8	Bearing cover		
9	Coupling		
10	Intermediate plate		
11	Socket head cap screw with lock	DIN	912
12	Nilos-ring		
13	Compensation disk		
14	Socket head cap screw	DIN	912
15	Spring washer	DIN	7980
16	Socket head cap screw	DIN	912
17	Nut with flange		
19	Spring washer	DIN	7980
20	Shaft nut		
50	Pump body		
51	Spacer		
52	Inlet cover		
55	Impeller		
57	Extension pump body up 1270 mm depth of immersion		
58	Pump plate		
60	O-ring		
61	Socket head cap screw with lock	DIN	912
62	Bearing bush		
63	Running sleeve		
64	Woodruff key	DIN	6888
65	Casing ring		
66	O-ring		
68	Splash ring		
70	Socket head cap screw with lock	DIN	912
71	Rotary shaft seal		
72	Spring washer	DIN	7980
74	Socket head cap screw with lock	DIN	912
75	Spring washer	DIN	7980
77	Hexagon thin nut		
79	Balancing ring (as needed)		
82	Joining socket		
83	Socket head cap screw	DIN	912
84	Spring washer	DIN	7980
85	O-ring		
86	Screw plug	DIN	908
87	Sealing ring	DIN	7603
91	Extension shaft up 1270 mm depth of immersion		
92	Insert shaft		
93	Shaft clamp 2 x up 1270 mm depth of immersion		

10.2 Indications to the spare part order

Spare parts are available from the supplier.
Standard commercially available parts are to be purchased in accordance with the model type.
The ordering of spare parts should contain the following details:

1. **Pumptype**
   e.g. STA3600/920
2. **Pump No.**
   e.g. 04153450
   The date of the construction year is a component of the pumps type number.
3. **Voltage, Frequency and Power**
   Take item 1, 2 and 3 from the nameplate
4. **Spare part with item No.**
   e.g. Inlet cover item No. 52

11 Repair Instructions / Replacing shaft clamps and shafts

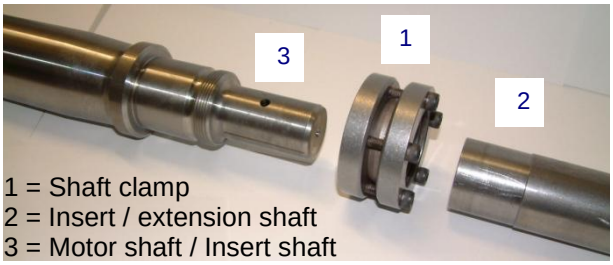

1 = Shaft clamp
2 = Insert / extension shaft
3 = Motor shaft / Insert shaft

11.1 Dismantling the insert shaft or extension shaft

– Disconnect the submergible pump from the mains both electrically and mechanically.
– Remove pump from system. Secure pump against tipping over, i.e. use ropes to secure pump.
– Disassemble the motor. Set the pump down on the intermediate plate. Dismantle the pump unit and the extension pump body (if appropriate).

Wear safety gloves!
Risk of injury due to sharp edges on pump components, i.e. impeller blades.

– Loosen the screws on the shaft clamp (1) one after the other.

Do not, under any circumstances, remove the screws completely, **danger of injury!**

– Remove the outer race over the jacking-screws and tensioning screws, inner ring from outer ring. The squeezing off is finished when the outer ring has been completely removed.
– Remove the extension shaft (2) and shaft clamp (1).
– Dismantle the pump body.
– Loosen the screws on the shaft clamp (1) (see above), pull the insert shaft (2) off the motor shaft (3).

11.2 Assembling the insert shaft and motor shaft

ATTENTION

Clean the contact surfaces of the insert shaft (2) (inside) and the motor shaft (3). They must not be lubricated or oiled.

– Set the pump down on the intermediate plate.
– Position the shaft clamp (1) (use a new shaft clamp) in the centre of the cranked clamping diameter (2) of the insert shaft.
– Insert the motor shaft (3) into the insert shaft (2).
– **Tighten**:
  Mark the first screw and tighten all the screws evenly by hand, one after the other in a clockwise direction (not cross-ways).
– This must follow until abutting faces of the inner and outer rings of the screw-head side axially align. Proper bracing can be verified visually.
– Use a torque screwdriver to tighten each screw first with 20 Nm then with 30 Nm and finally with 35 Nm (in a clockwise direction again).
– Mount the pump body.

The remainder of the reassembly process is to be completed in the opposite order of the prior described dismantling process.

ATTENTION

Note torques for the screw connections!

When putting the pump back into use, **make sure the direction of rotation is correct!**

Tightening torques for screwed connections

Thread - ∅	**M5**	**M12**	**M16**	**M20**
Strength classes	8.8	8.8	8.8	
Tightening torque (Nm)	**5** Nm	**80** Nm	**190** Nm	**390** Nm

12 Disposal

When disposing of the pump or the packaging materials the local and national regulation for proper disposal must be complied with.
Prior to its disposal, the pump must be completely drained and decontaminated if necessary.

13 EC declaration of conformity

DEUTSCH / ENGLISH /FRANÇAIS / ESPAÑOL

BRINKMANN PUMPS

EG-Konformitätserklärung

EC declaration of conformity / Déclaration de conformité CE / Declaración de conformidad CE

Hersteller / Manufacturer / Constructeur / Fabricante

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2, D-58791 Werdohl

Produktbezeichnung / Product name / Désignation du produit / Designación del producto

Tauchpumpen / Immersion pumps / Pompes plongeantes / Bombas de inmersión

Typ / Type / Tipo **STA3600…STA4500**

Das bezeichnete Produkt stimmt mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-Mitgliedsstaaten überein:
The named product conforms to the following Council Directives on approximation of laws of the EEC Member States:
Le produit sus-mentionné est conforme aux Directives du Conseil concernant le rapprochement des législations des Etats membres CEE:
El producto designado cumple con las Directivas del Consejo relativas a la aproximación de las legislaciones de los Estados Miembros de la CEE:

2006/42/EG	Richtlinie für Maschinen
2006/42/EC	Council Directive for machinery
2006/42/CE	Directive du Conseil pour les machines
2006/42/CE	Directivas del Consejo para máquinas
2014/30/EU	Richtlinie für elektromagnetische Verträglichkeit
2014/30/EU	Council Directive for Electromagnetic compatibility
2014/30/UE	Directive du Conseil pour Compatibilité électromagnétique
2014/30/UE	Directivas del Consejo para Compatibilidad electromagnética

Hinsichtlich der elektrischen Gefahren wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG die Schutzziele der Niederspannungsrichtlinie 2014/35/EU eingehalten.
With respect to potential electrical hazards as stated in appendix I No. 1.5.1 of the machine guide lines 2006/42/EC all safety protection goals are met according to the low voltage guide lines 2014/35/EU.
Conformément à l'annexe I N° 1.5.1 de la Directive "Machines" (2006/42/CE) les objectifs de sécurité relatifs au matériel électrique de la Directive "Basse Tension" 2014/35/UE ont été respectés.
Con respecto al potencial peligro eléctrico como se indica en el apéndice I No. 1.5.1 del manual de la máquina 2006/42/CE, todos los medios de protección de seguridad se encuentran según la guía de bajo voltaje 2014/35/UE.

Die Übereinstimmung mit den Vorschriften dieser Richtlinien wird nachgewiesen durch die vollständige Einhaltung folgender Normen:
Conformity with the requirements of this Directives is testified by complete adherence to the following standards:
La conformité aux prescriptions de ces Directives est démontrée par la conformité intégrale avec les normes suivantes:
La conformidad con las prescripciones de estas directivas queda justificada por haber cumplido totalmente las siguientes normas:

Harmonisierte Europ. Normen / Harmonised Europ. Standards / Normes europ. harmonisées / Normas europ. armonizadas

EN 809 :1998+A1 :2009+AC :2010 **EN ISO 12100 :2010** **EN 60204-1 :2006/AC :2010** **EN 61000-3-2 :2014**
EN 61000-3-3 :2013 **EN 61000-6-2 :2005/AC :2005** **EN 61000-6-3 :2007/A1 :2011/AC :2012**

Nationale Normen / National Standards / Normes nationales / Normas nacionales : **EN 60034-1 :2010/AC :2010**

Die Hinweise in der Betriebsanleitung für den Einbau und die Inbetriebnahme der Pumpe sind zu beachten.

The instructions contained in the operating manual for installation and start up the pump have to be followed.

Les indications d'installation / montage et de mise en service de la pompe prévues dans l'instruction d'emploi doivent être suivies.

Tenga en cuenta las instrucciones en el manual para la instalación y puesta en marcha de la bomba.

Brinkmann Pumpen, K. H. Brinkmann GmbH & Co. KG

Werdohl, 16.07.2018

.....
Norbert Burkl Leiter Qualitätsmanagement / Manager of quality management / Directeur de gestion de la qualité / Director de gestión de calidad

Dr. H. Abou Dayé
K. H. Brinkmann GmbH & Co. KG
Friedrichstraße 2, D-58791 Werdohl
Dokumentationsbevollmächtigter / Representative of documentation/ Mandataire de documentation / Mandatario de documentación